PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

SKSPS291MT
29" Pedestal

SKS



Dimensions

Product (W x H x D)	29" x 13 5/8" x 29 1/2"
Depth with Drawer Open	44 3/4"
Carton Dimensions (W x H x D)	31 9/16" x 16 1/2" x 33 27/32"
Approx. Weight (Product / Carton)	57 lbs. / 67 lbs.

Warranty Summary*

Parts and Labor	3 Years

Elevated for Comfortable Loading and Unloading

Elevates the appliance more than a foot off the floor, providing a more comfortable height for loading and unloading.

Additional Storage

A spacious integrated drawer provides convenient storage for laundry essentials while helping keep the laundry room beautifully organized

*These warranties give you specific legal rights and you may have other rights that vary from state to state. For complete warranty details, refer to your Use & Care manual.

©2026 LG Electronics USA, Inc. All rights reserved. "SKS" and the SKS logo are registered trademarks of LG Electronics Inc. Design, features and specifications are subject to change without notice. Specifications are for planning purposes only. Consult the product's installation instructions for final dimensional data and other details prior to making cutouts or custom panels. Consult with a heating and ventilation engineer for your specific ventilation requirements. Non-metric weights and measurements are approximate. Smart features require Internet access.

1-855-790-6655 | www.sksappliances.com

PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

SKSPS291MT
29" Pedestal

SKS

IMPORTANT

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS	
Product (WxHxD)	29" x 14 1/8" x 30 7/8" (52 3/4" with drawer open)
Carton (WxHxD)	31 9/16" x 16 1/2" x 33 27/32"
Weight (Product/Carton)	108 / 118 lbs

CHOOSING THE PROPER LOCATION

⚠ WARNING


Excessive Weight Hazard

- Two or more people may be needed to install and move the appliance and pedestal assembly.
- Do not allow children to play on the drawer.
- Do not step on the handle.
- A firm, solid floor is even more critical to a front-loading washer than to a top-loader. If your floor is wooden and /or frame construction, you may need to reinforce it. Front-loaders have substantially faster spin speed than top-loaders, causing greater vibration. If the floor is not solid, your washer will vibrate.


WASHER/COMBO INSTALLATION

1 Remove pedestal,installation hardware, and instructions from the shipping carton.

2 Before installing the pedestal, remove foreign objects on the floor clean the floor. Dust, water, oil, detergent and so on could cause vibration due to bad contact of legs with floor.




3 Level the pedestal on the clean place by adjusting the feet.

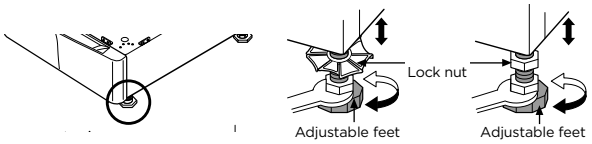

NOTE

- Do not extend the legs no more than necessary to level the washer. The more the legs are extended, the more the washer will vibrate.
- After the washer is leveled, tighten the lock nuts up toward the base of the washer using the wrench. All four lock nuts should be tightened.

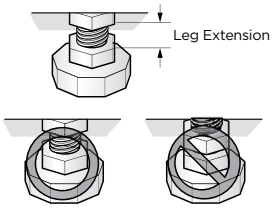


WASHER/COMBO INSTALLATION


4 Position the washer/combo on top of the pedestal.


NOTE

- Because of the weight of the washer/combo, two or more people may be needed.
- If the washer or combo was previously installed, unplug it, disconnect the inlet hose (s) from the faucet (s), disconnect the drain hose, and drain all hoses.

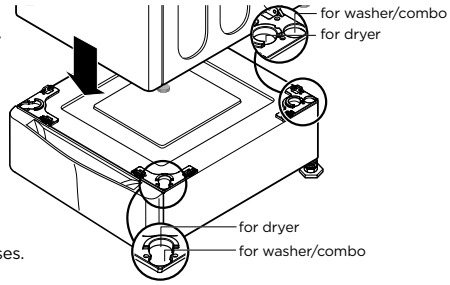


5 Level the washer/combo on the pedestal by adjusting the feet.

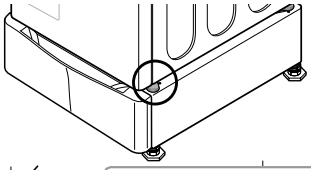

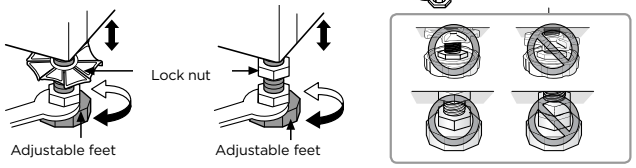


6 Make sure the holes on the pedestal align with the holes in the appliance, then install 4 screws at each corner to securely attach the appliance to the pedestal.

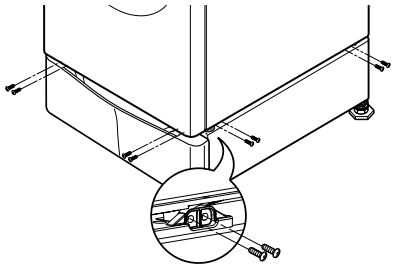

7 Move the washer/combo to the desired place.

NOTE

- The appliance and pedestal assembly must be placed on a solid and level floor for proper operation. Adjust the legs of the appliance and pedestal by turning with a wrench. Then, adjust the lock nut toward the pedestal while holding the pedestal leg using a wrench.
- **DIAGONAL CHECK** When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all. (Please check both directions.) If the machine rocks when pushing the machine top plate diagonally, adjust the feet again.

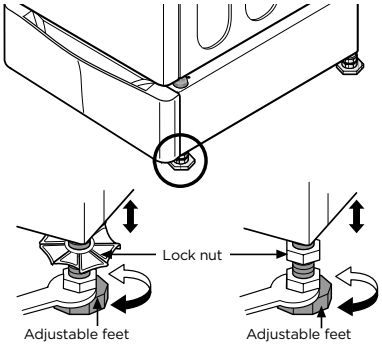

- To make sure that the washer is properly level, run the washer with a test load: place approximately 6 pounds of laundry in the machine. Then press POWER, press RINSE+SPIN, and then press the START/PAUSE button. Verify that the washer does not rock or vibrate excessively during the spin cycle. If the washer vibrates or shakes, adjust the leveling feet until the washer is stable and retest.
- Please see Owners Manual for DRYER INSTALLATION