PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

SKSWF291MT
5.8 cu ft. Smart Front Load Washer

SKS



Precision Multi-Jet Wash
Five powerful jets deliver precisely targeted sprays from multiple angles, helping detergent penetrate deep into fabrics for exceptional cleaning performance—even with large loads—in under 30 minutes.*

Quiet Anti-Vibration Technology
Advanced anti-vibration technology keeps loads balanced for smooth, quiet operation. Engineered to minimize noise and vibration, even with large loads, it delivers a refined laundry experience on any level of the home.

Automatic Dispenser
Fill the detergent and softener reservoirs once and let the washer automatically dispense the precise amount for every load. Effortless and consistent, with less measuring and fewer refills.

ThinQ® and Wi-Fi Enabled
Control your laundry from virtually anywhere with the ThinQ app. Start cycles, check remaining time and receive notifications directly on your smartphone. Select features can also be controlled with voice assistants.**

Innovation

Wi-Fi Enabled for ThinQ® Monitoring with iPhone / Android App	Yes
Remote Monitoring	Yes

Capacity & Matching Dryers

Capacity (cu. ft.)	5.8 cu. ft.
Matching Electric Dryer	SKSDF291EMT
Matching Gas Dryer	SKSDF291GMT

Appearance

Full Touch LCD Display	Yes

Energy & Water

ENERGY STAR® Certified	Yes
CEE Tier	Advanced Tier
IMEF	3.2
IWF	2.6

Wash Cycles

Number of Cycles	31

Wash Cycles

Sanitary, Allergiene®, Bedding, Perm. Press, Cotton Normal, Heavy Duty, Bright Whites, Delicates, Handwash, Quick Wash, Tubclean, Towels, Small Load, Rinse + Spin, Kids Wear, Active Wear, Spin Only, AI Wash, Color Care, Swimwear, Jeans, Sweat Stains, Dresses, Large Load, XL Load, Overnight, Cold Wash, Pet Care, Microplastic Care, Nozzle Clean, Leggings

Wash Options

Number of Options	18

Options

TurboWash®, Steam, Fresh Care, Pre-wash, Remote Start, Delay Wash, Wi-Fi, Add Item, Extra Rinse, Control Lock, Drum Light, Cold Wash, Detergent Level, Softener Level, Signal, Cycle List Edit, Cycle Optimization, Softener Tank Use

*Based on independent testing comparing models WM4500, WM4200, or WM4000 and WM3900 in normal cycle with TurboWash® Option, 10 lb. load (June 2020)
**Wi-fi and app required.

©2026 LG Electronics USA, Inc. All rights reserved. "SKS" and the SKS logo are registered trademarks of LG Electronics Inc. Design, features and specifications are subject to change without notice. Specifications are for planning purposes only. Consult the product's installation instructions for final dimensional data and other details prior to making cutouts or custom panels. Consult with a heating and ventilation engineer for your specific ventilation requirements. Non-metric weights and measurements are approximate. Smart features require Internet access.
1-855-790-6655 | www.sksappliances.com

PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

SKSWF291MT
5.8 cu ft. Smart Front Load Washer

SKS

Wash Details

No. of Wash / Rinse Temps	5
Wash / Rinse Temps	
Extra Hot, Hot, Warm, Cold, Tap Cold	
No. of Spin Speeds	5
MAX RPM	1,300
Water Levels	Load Sensing
No. of Soil Levels	5

Fabric Care

AI DD®	Yes
Precision Multi-Jet Wash	Yes
Allergiene® Cycle	Yes
Sanitary Cycle	Yes
Soil Level Sensor	Yes

Convenience

Quiet Anti-Vibration Technology	Yes
Dispenser	
Automatic Dispenser Cartridge (Detergent, Softener), Main Wash,	
End of Cycle Signal	Yes
LoadSense	Yes
Control Lock	Yes
Auto Suds Removal	Yes
Leveling Legs	Yes (4)
Drum Light	Yes

Smart Features

Wi-Fi Enabled	Yes
ThinQ® Technology	Yes
ThinQ Care™	Yes
ThinQ Up™	Yes
SmartDiagnosis™	Yes
Remote Start (On / Off)	Yes
Energy Monitoring	Yes
Tub Clean Coach	Yes

*These warranties give you specific legal rights and you may have other rights that vary from state to state. For complete warranty details, refer to your Use & Care manual.

Motor and Agitator

Motor Type	Inverter Direct Drive Motor
Axis	Horizontal

Materials and Finishes

Stainless Steel Drum	Yes
Cabinet / Control Panel	Satin Silver Painted Steel
Top Plate	Satin Silver Painted Steel
Door / Rim	Glass / Chrome
Door Cover	Tempered Glass Door

Technical Specs

Ratings	UL Listed
Electrical Requirements	120V, 12 Amps
Type	Electric
Plug	Included
Plug Type	3-Prong
Min. / Max. Water Pressure	20 psi – 120 psi

Optional Accessories

Pedestal	SKSPS291MT
(W x H x D) 29 x 13 5/8" x 29 1/2" (44 3/4" D with Door Open)	
Pedestal Washer	SKSPW291MT
(W x H x D) 29" x 14 1/8" x 30 7/8" (52 3/4" with Drawer Open)	

Dimensions

Product (W x H x D)	29" x 40 3/4" x 31 1/8"
Depth with Door Open	54 5/16"
Carton Dimensions (W x H x D)	31" x 44 1/4" x 33 3/8"
Approx. Weight (Product / Carton)	217 lbs. / 226 lbs.

Warranty Summary*

Parts and Labor	3 Years
Direct Drive Motor	10 Years
Drum	10 Years

PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY PRELIMINARY

SKSWF291MT
5.8 cu ft. Smart Front Load Washer

SKS

IMPORTANT

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS	
A	54 5/16" (138cm)
B	31 1/8" (79cm)
C	4" (10cm)
D	1" (2.5cm)
E	29" (73.7cm)
F	1/4" (0.5cm)
Product Dimentions (in) (W x H x D)	29" x 40 3/4" x 31 1/8"
Carton Dimentions (in) (W x H x D)	31" x 44 1/4" x 33 3/8"
POWER SOURCE	
Ratings	UL Listed
Electrical Requirements	120V, 12 Amps


CONNECTING THE WATER INLET HOSES

To avoid the risk of costly water damage, purchase and install new water inlet hoses when installing the washer.


⚠ WARNING

- Do not overtighten the hoses or cross-thread the hose fittings. Overtightening or cross-threading can damage the valves or couplings, resulting in leaking and property damage.
- Do not reuse old hoses. Use only new hoses when installing the washer. Old hoses could leak or burst causing flooding and property damage.

1. Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal ❶ a in place in both ends of each hose to prevent leaking.

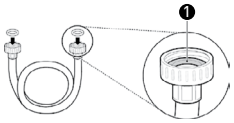


2. Connect the water supply hoses.
   - Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
   - Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

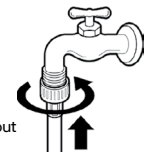


3. Flush out the inlet hoses.
   - After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.
   - Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.



4. Attach the inlet hoses to the back of the washer.
   - Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.
   - Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses.

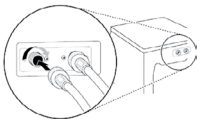

PRODUCT DIMENSIONS

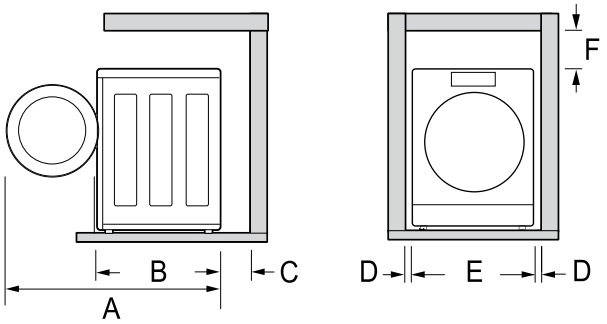

CHOOSING THE PROPER LOCATION

Check the following requirements for the install location before installing the washer.

- Allow for sufficient space between the walls and the washer for installation.
- Make sure that the floor is clean, dry and free of dust, dirt, water and oil so the leveling feet cannot slide easily. Leveling feet that can move or slide on the floor can contribute to excess vibration and noise.
- If the floor has too much flex, reinforce it to make it more rigid. If the floor is not solid, it may cause severe vibration and noise.
- The power outlet must be within 60 inches (1.5m) of either side of the washer.
- Position the washer so that the outlet and plug are easily accessible.
- Do not overload the outlet with more than one appliance.

CONNECTIONG THE DRAIN HOSE


Connect the drain hose to either a standpipe or laundry tub.

⚠ WARNING

- The drain hose should always be properly secured. Failure to properly secure the drain hose can result in flooding and property damage.

Using a Standpipe to Drain

1. Clip the end of the hose into the elbow bracket.
   - Connect the elbow bracket ❶ within 4 inches (10 cm) of the end of the drain hose. If the drain hose is extended more than 4 inches (10 cm) beyond the end of the elbow bracket, mold or microorganisms could spread to the inside of the washer.
2. Insert the end of the drain hose into the standpipe.
3. Use the provided tie strap ❷ to secure the drain hose in place.
4. If the water valves and drain are built into the wall, fasten the drain hose to one of the water hoses with the provided tie strap ❸ (ribbed side on inside).

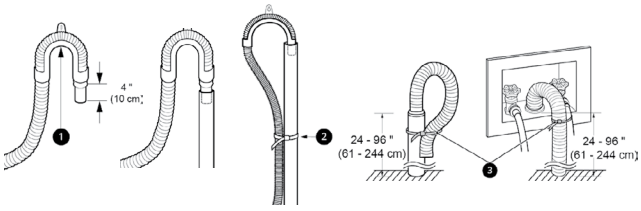

Using the Laundry Tub to Drain

1. Clip the end of the hose into the elbow bracket.
   - Connect the elbow bracket ❶ within 4 inches (10 cm) of the end of the drain hose. If the drain hose is extended more than 4 inches (10 cm) beyond the end of the elbow bracket, mold or microorganisms could spread to the inside of the washer.
2. Hang the end of the drain hose over the side of the laundry tub.
3. Use the provided tie strap to secure the drain hose in place.

